



OVERFLOW  
ANYWHERE  
ON TOP RIB

STRAINER



TANK OUTLET  
ANYWHERE ON  
BOTTOM RIB

**IMPORTANT NOTES TO READ...!!!**

- 1 PERSON + DRIVER REQUIRED TO HANDLE TANK.
- Drawing shows all available outlet & overflow positions. Standard installations have only 1 outlet & 1 overflow.
- Please refer to 'Easy 6 Step Tank Installation Guide' for instruction to install accessories.
- All dimensions are in Metres and rounded to the nearest Centimetre.
- Capacities & measurements are tested in accordance with AS4766, but may vary due to roto-moulding process.
- Bushmans recommends top and sides clearance of 100mm minimum when estimating space required for tank.

**BUSHMANS SALES DRAWING**

LEVEL 13, 300 GEORGE STREET, SYDNEY, NSW 2000

Ph 1800 00 88 88 Fax 02 8224 5802 WWW.BUSHMANTANKS.COM.AU

Copyright 2010 Bushmans Group Pty Ltd. This drawing may not be reproduced or transmitted in any form or by any means in part or whole without written permission of Bushmans Group Pty Ltd.

Drawn BUSH ENG  
Date APR-2008  
Scale Not to Scale

Project Title ROUND TANK  
Material POLYETHYLENE  
Finish -----

Drawing Title  
**TT1100 TALL ROUND  
5000Litre Tank**

A4 Size Drawing

Sheet 1 of 1